


Switch Boardroom Loft TV from Android to Windows

If the TV's computer is in Android mode here are the steps to change it back to Windows.


1. If it looks like below it means that it is in Android mode.




2. You will need to change it to PC mode.
3. You will need to click on the little triangle on the right side of the TV.

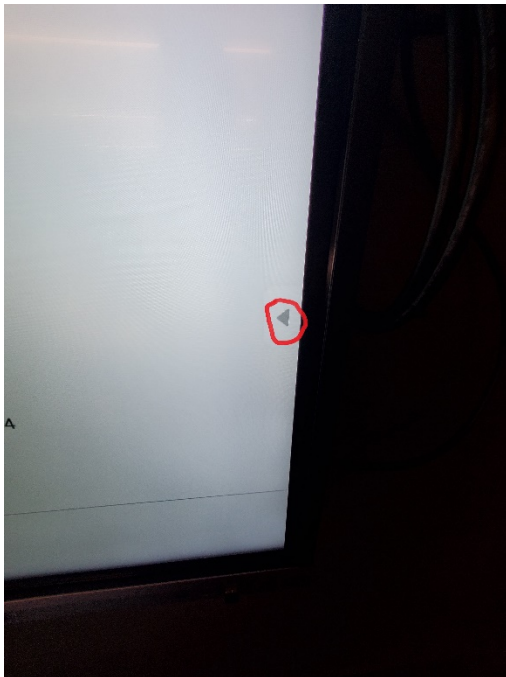


4. Once you click on the Triangle you will see this screen

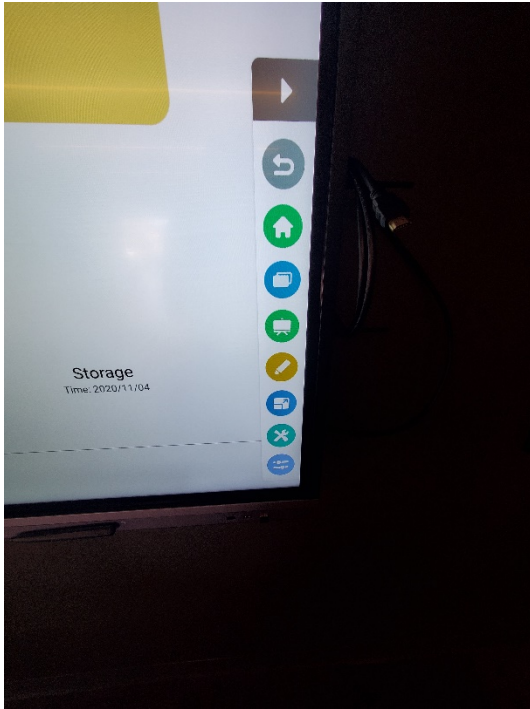

5. You want to select the last button on the menu

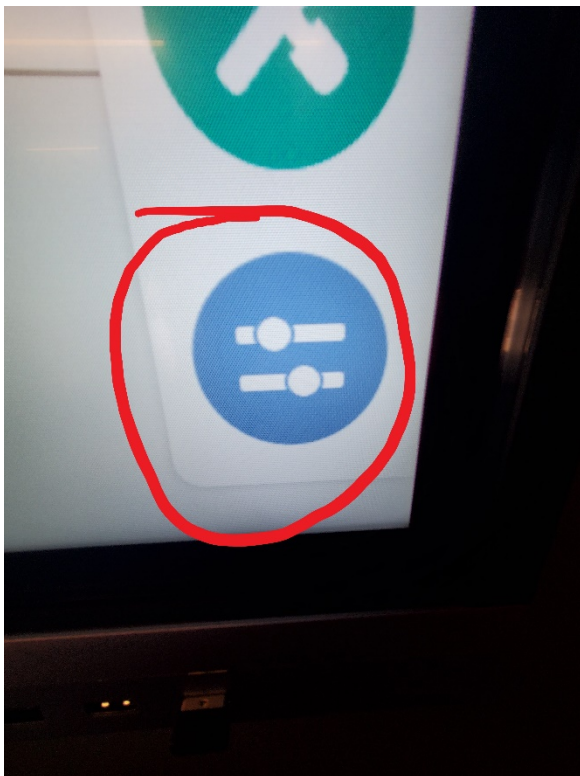

6. Once you have selected the last button on the menu you will see this screen and you want to select the PC icon. Once you have select the PC mode you will be taken to the windows screen.

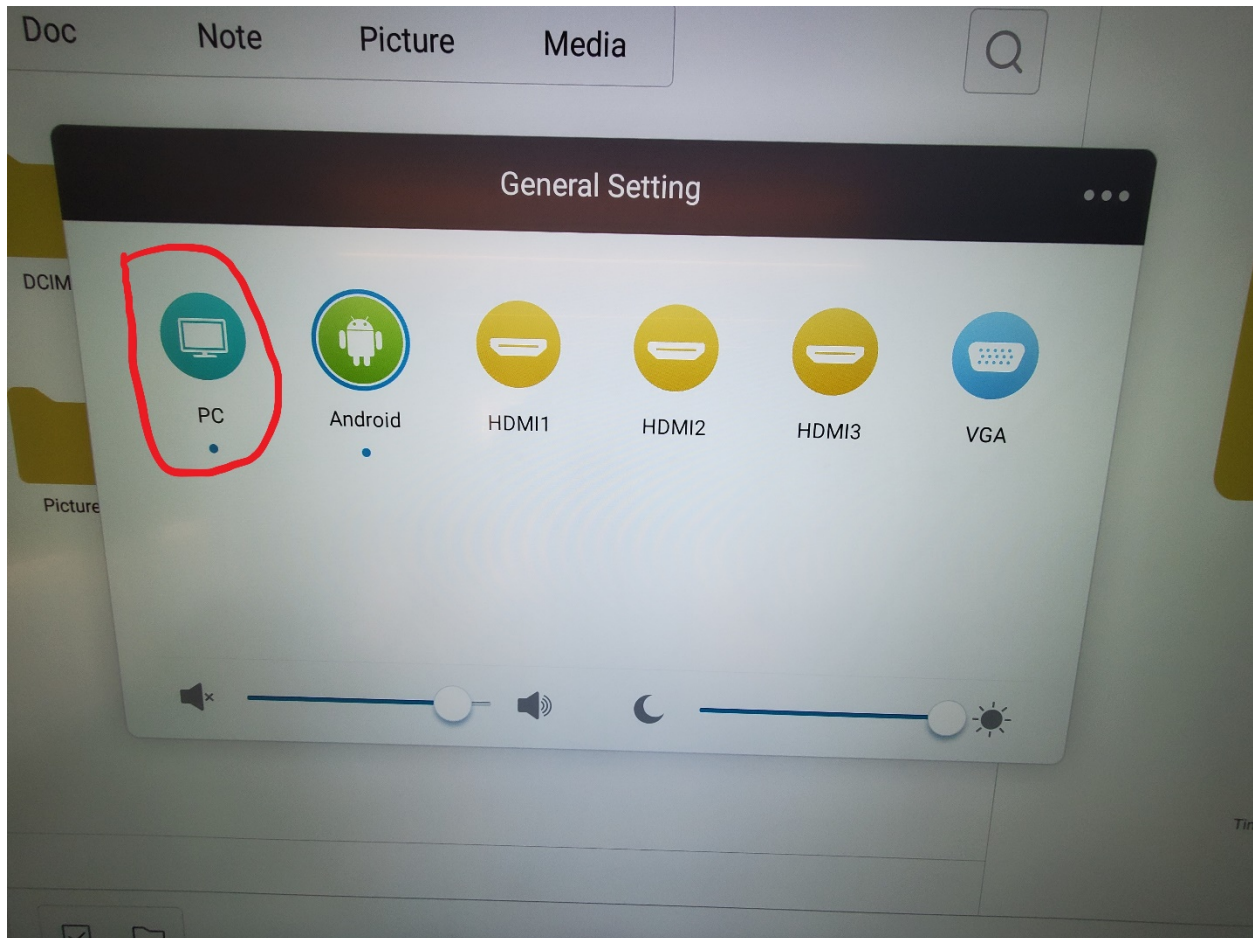

7. The PC is setup to login in the conference user automatically.